

## Acer Touchpad Too Sensitive

---

To change the sensitivity of the touchpad on the Acer Aspire (blue) laptop perform the following steps:

1. Tap Start
2. Tap Control Panel
3. Tap Printers and Other Hardware
4. Tap Mouse
5. Tap Device Settings (tab)
6. Tap Device Settings (button)
7. Tap Sensitivity
8. Tap Sensitivity - Adjust setting by moving the indicator on the slide bar.